



Cordiess Lawir Mower

GE-CM 18/30 Li - Solo

Item No.: 3413157

Ident No.: 11017

Bar Code: 4006825631869

The Einhell GE-CM 18/30 Li - Solo cordless lawn mower is a powerful helper for maintaining lawns. Recommended for lawn areas up to 150m². For a long service life the mower has an Einhell brushless motor and a high-quality impact-resistant plastic housing. Practical features include the folding long handle for compact storage, the integrated carry handle for easy transportation and the 3-level axial cutting height adjustment facility. Large wheels exert less stress on the lawn. The system battery and charger are available separately.

Features & Benefits

-Member of the Power X-Change family, 1x18V battery necessary

- -Einhell Brushless Motor
- -Axial cutting height adjustment, 3 levels
- -Long handle folding
- -Integrated carry-handle for easy transport
- -Grass protecting, large wheels
- -High quality, blow tough plastic housing
- -Recommended for lawn areas up to 150 m²
- -Supplied without battery and charger (available separately)

Technical Data

- Idle	speed
--------	-------

- Cutting	width
-----------	-------

- Cutting height adjustment
- Capacity of catching device
- Wheel diameter front
- Wheel diameter rear

Logistic Data

- Product weight
- Gross weight single packaging
- Dimensions single packaging
- Pieces per export carton
- Gross weight export carton
- Dimensions export carton
- Container quantity (20"/40"/40"HC)

7.91 kg 9.47 kg 605 x 395 x 375 mm 1 Pieces 9.47 kg 595 x 385 x 310 mm 312 | 642 | 749

3300 min^-1 30 cm

wheel

25 L

14 mm

14 mm

3 settings | 30-70 mm | axial













Available as special accessories



Ersatzmesser GE-CM 18/30 Li Lawn Mower Accessory Item No.: 3404553 Bar Code: 4006825633092 Einhell Accessory



18V 4,0 Ah Power-X-Change Battery Item No.: 4511396 Bar Code: 4006825610376 Einhell Accessory

18V 4,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512042 Bar Code: 4006825613704 Einhell Accessory



18V 30min Power-X-Change PXC-Charger Item No.: 4512011 Bar Code: 4006825587029 **Einhell Accessory**







18V 3,0 Ah Power-X-Change Battery Item No.: 4511341 Bar Code: 4006825590593 Einhell Accessory

18V 3,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512041 Bar Code: 4006825613698 Einhell Accessory

18V 2,6Ah P-X-C Plus Battery Item No.: 4511436 Bar Code: 4006825616590 **Einhell Accessory**

18V 5,2 Ah P-X-C Plus Battery Item No.: 4511437 Bar Code: 4006825616606 **Einhell Accessory**